



Office & Showroom

Shanghai
Tel: (86) 21 6278 8888

Beijing
Tel: (86) 10 8521 7588

Guangzhou
Tel: (86) 20 3892 2422

Shenzhen
Tel : (8 6) 769 8203 1111 ext 31300

Dongguan
Tel: (86) 769 8203 1111

Chongqing
Tel: (86) 23 6711 3598

Hong Kong
Tel: (852) 2828 6888

HNI Singapore
Tel: (65) 6817 8750

Service Hotline

Mainland China: (86) 800 820 6073 | (86) 400 686 8073
Hong Kong & Asia Pacific: (852) 2828 6000

分行及展厅

上海
电话：(86) 21 6278 8888

北京
电话：(86) 10 8521 7588

广州
电话：(86) 20 3892 2422

深圳
电话：(86) 769 8203 1111 ext 31300

东莞
电话：(86) 769 8203 1111

重庆
电话：(86) 23 6711 3598

香港
电话：(852) 2828 6888

HNI 新加坡
电话：(65) 6817 8750

客户服务热线


中国大陆：(86) 800 820 6073 | (86) 400 686 8073
香港及亚太区：(852) 2828 6000

Trus



INSTRUCTION



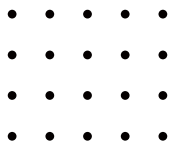

Trus: High Flyer

自由翱翔 魅力时尚



a 3D Armrest Adjustment

Adjust 3D armrest by lifting up arm trigger and releasing into desired position: up and down, forward and backward, or pivot.

3D可调节扶手

通过按压扶手按钮调节至您所需的位置，然后松开按钮固定扶手位置。3D扶手可进行上下，前后或旋转角度的全方位调节。



b Seat Depth Adjustment

Adjust seat depth by lifting lever and sliding forward or back, releasing to lock into desired position.

可调节的座椅深度

调节座椅深度时，需向上拉动按钮向前或向后滑动座垫，松开按钮将其锁定至您所需位置。



c Seat Height Adjustment

To raise the seat, lift your weight off the seat and pull up on the lever. To lower seat, lift up on the lever while you are seated. Release lever when seat reaches desired height.

座椅高度调节

要将座椅调节到所需的高度，可将身体离开座椅，向上拉动调节手柄让座位升高；如需将座椅降低，可坐在椅座上，将手柄上拉便可随意让座椅降低。



Adapted specifically to each individual, Trus accommodates various body shapes and postures, contouring for optimal seated comfort.

Trus 办公座椅可根据每个人的需求进行独特贴心的调节，以配合不同身形和坐姿的需求，让您享受与众不同的坐感舒适。



d Weight Activated Synchronized Mechanism

Trus finds an ideal support balance by sensing your body weight, adjusting recline tension and back-and-forth motions accordingly.

自重重力倾仰机关

Trus 通过感知您的体重来找到理想的支持平衡点，自动调整倾仰张力和来回运动。



e Tilt Lock

Slide tilt lever back to preferred position, press lever under seat to lock. Lift tilt level to release lock.

倾仰锁定

当座椅向后倾仰至您满意的角度的时，按下调节手柄从而完成位置锁定。椅背需返回原位时，向上拉动倾仰调节手柄即可。



f Lumbar Adjustment

Lumbar adjustment provides back support. Adjust lumbar pad up or down to desired position.

腰垫调节

腰垫调节使座椅更加贴合您的腰部。腰支撑可以上下高度调节至最贴合您腰部的位置。

