



Office & Showroom

Shanghai
Tel: (86) 21 6278 8888

Beijing
Tel: (86) 10 8521 7588

Guangzhou
Tel: (86) 20 3892 2422

Shenzhen
Tel: (86) 769 8203 1111 ext 31300

Dongguan
Tel: (86) 769 8203 1111

Hong Kong
Tel: (852) 2828 6888

HNI Singapore
Tel: (65) 6817 8750

分行及展厅

上海
电话：(86) 21 6278 8888

北京
电话：(86) 10 8521 7588

广州
电话：(86) 20 3892 2422

深圳
电话：(86) 769 8203 1111 ext 31300

东莞
电话：(86) 769 8203 1111


香港
电话：(852) 2828 6888


Service Hotline

Mainland China: (86) 800 820 6073
Hong Kong & Asia Pacific:
(852) 2828 6000

客户服务热线

中国大陆：(86) 800 820 6073
香港及亚太区：(852) 2828 6000

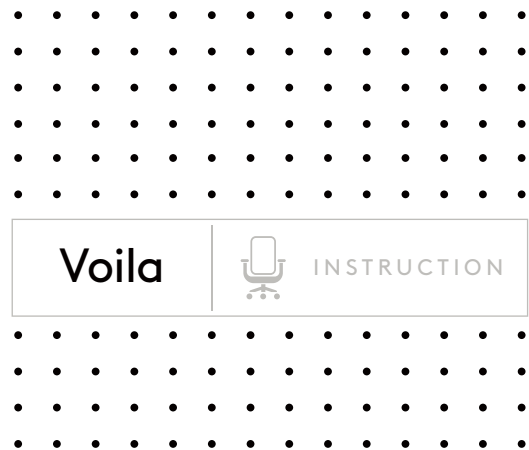

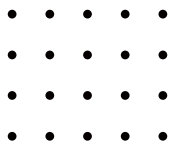

Voila: Stylish Appeal

时尚潮流 魅力共赏



a Armrest Adjustment

Push arm trigger to adjust height and release to lock into desired position. Push or pull armrest forward or backward to adjust position.

扶手调节

请按下扶手下方的按钮，调节至承托手臂舒适的位置高度时，松开即可，扶手也可前后移动至适合您前臂承托的位置。



b Seat Height Adjustment

To raise seat, lift weight off and pull up on lever. To lower seat, lift lever while seated. Release when seat reaches desired height.

座椅高度调节

当升高座椅时，需要您的身体略微离开座椅并向上拉动调节杆。当降低座椅高度时，需要您坐在座椅上并向上拉动调节杆，直至座椅至升降至适合您的高度松开调节杆。



c Tilt Tension

Turn lever clockwise to increase tension, anticlockwise to reduce tension.

轻仰张力调节

若顺时针旋转调节杆，可增加轻仰张力，若逆时针旋转调节杆，可减小张力。



Voila is a stylish, appealing chair that offers sleek aesthetics within a functional form. Its ergonomic design and synchronized tilt lock mechanism maximizes your seating experience, for uncompromising quality and comfort.

Voila 是一款时尚和富有魅力的座椅，柔美流畅的美学造型与卓越功能的完美融合。凭借符合人体工学的设计与同步倾仰锁定机关的完美组合，可提升您舒适的座感体验，并确保其无与伦比的质感和舒适度。



d Lumbar Adjustment

Lumbar adjustment provides back support. Adjust lumbar pad up or down to desired position.

靠背调节

靠背调节使座椅更加贴合您的腰部。腰支撑可以上下高度调节至最贴合您腰部的位置。



e Synchronized Tilt Lock

Tilt level is at bottom-left of seat. Slide tilt level backward to preferred reclining position, then forward to lock. Slide tilt level and push back to release lock.

倾仰调节锁定

倾仰角度调节装置位于座椅的左下方。当座椅向后倾仰至您满意的角度时，身体需略微向前从而完成位置锁定。解除锁定时，需滑动倾仰调节装置同时让身体用力向后倾仰。



f Seat Depth Adjustment

To adjust depth, press lever under seat and slide forward or backward. Release lever to lock into desired position.

座椅深度调节

当调节座椅深度时，请按下椅座下方的调节杆，并向前或向后滑动座垫。当座椅深度调节至您所需的位置时，松开调节杆从而锁定位置。

